



# LIFTMASTER WIRELESS KEYPAD

Locate the ANTENNA wire on the back or side of the motor (if your ANTENNA is **PURPLE** look at the 3500 series diagram below, if the ANTENNA is any other color use the 1200 series diagram). Next find the SMART button. The SMART button is used to add and subtract transmitters and keypads.



## CODING INSTRUCTIONS

### TO CLEAR OUT OLD CODES

Press and **HOLD** the **SMART** button for **20 seconds** release the SMART button and try any existing transmitter to make sure the old code is gone.

### TO ADD KEYPAD



Press and **RELEASE** the **SMART** button and immediately go to the Keypad. Input you 4 digit PIN number and press-

**ENTER** **ENTER** **ENTER** **ENTER**

### TO ADD A TRANSMITTER

Press and **RELEASE** the **SMART** button and then press the **TRANSMITTER** button 4 times slowly

Repeat above step with any remaining transmitters

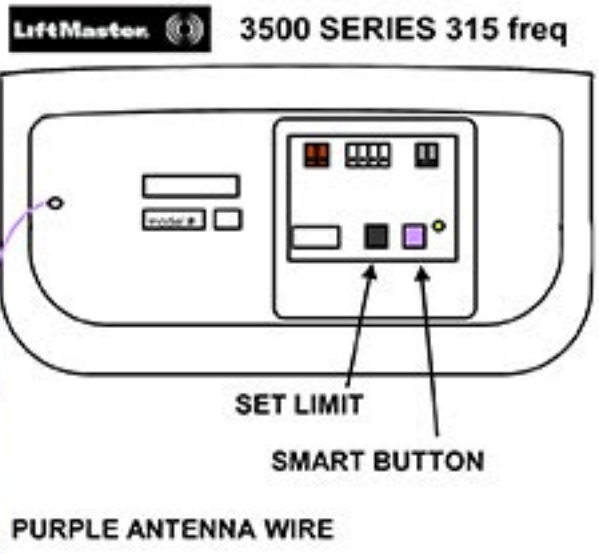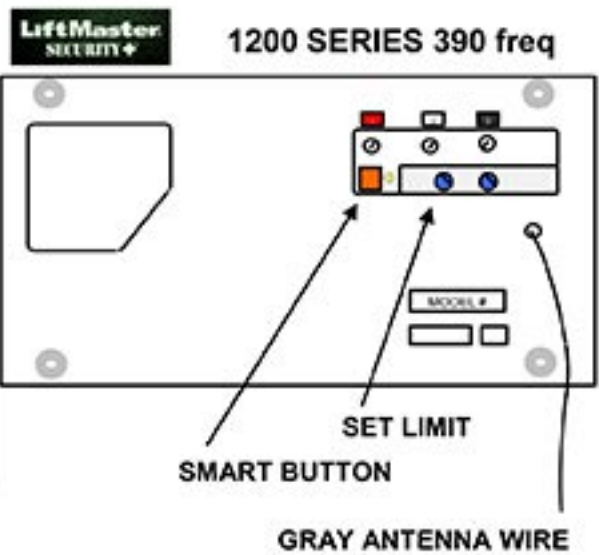

The Genuine. The Original.



Overhead Door Company  
of Louisville

[www.odclou.com](http://www.odclou.com)

502-530-4019